



MacBook Air 13" Early 2015 Left Speaker Replacement

Replace the left speaker in your MacBook Air 13" Early 2015.

Written By: Sam Lionheart



INTRODUCTION

Use this guide to replace the left-hand speaker in your MacBook Air 13" Early 2015. This guide shows you how to replace the speaker that is on the left during normal operation, but during the guide it will often be on the right side. Be sure you are replacing the correct speaker, and have the correct part.



TOOLS:

- [P5 Pentalobe Screwdriver Retina MacBook Pro and Air](#) (1)
- [Spudger](#) (1)
- [T5 Torx Screwdriver](#) (1)



PARTS:

- [MacBook Air 13" \(Mid 2011 to Early 2015\) Left Speaker](#) (1)

Step 1 — Lower Case




- **Before proceeding, power down your machine. Close the display and lay it on a soft surface top-side down.**
- Remove the following ten screws:
 - Two 9 mm P5 Pentalobe screws
 - Eight 2.6 mm P5 Pentalobe screws
- The special screwdriver needed to remove the ten 5-point Pentalobe screws can be found [here](#).

Step 2



- Wedge your fingers between the display and the lower case and pull upward to pop the lower case off the Air.
- Remove the lower case and set it aside.


Step 3 — Battery

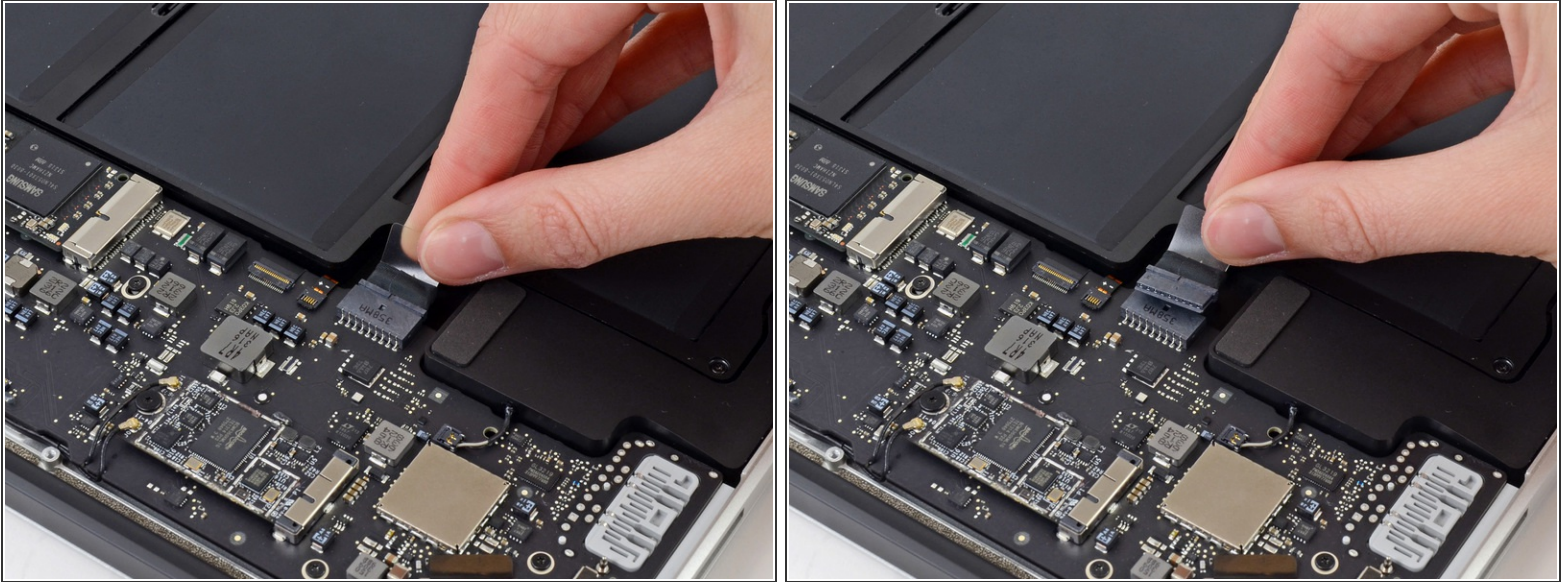

- Grab the clear plastic pull tab attached to the battery connector and pull it toward the front edge of the Air to disconnect the battery from the logic board.


⚠ Do not lift upward on the connector as you disconnect it.

Step 4

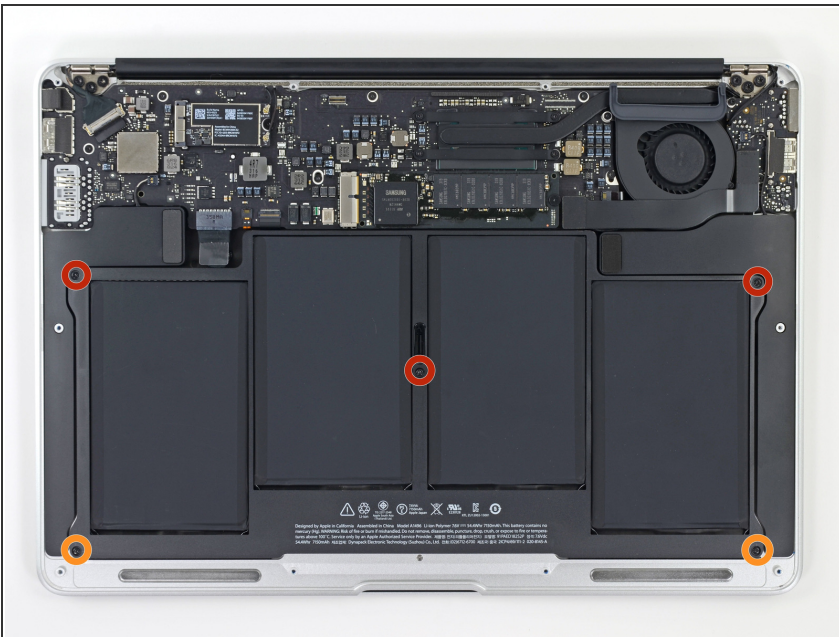

- Remove the following five screws securing the battery to the upper case:
 - Three 6.3 mm T5 Torx screws
 - Two 2.4 mm T5 Torx screws

Step 5

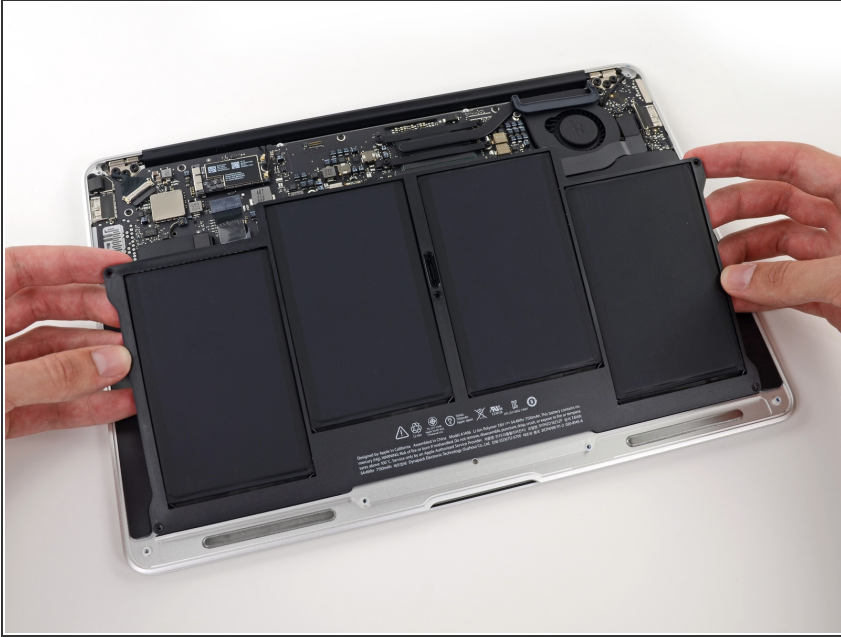

- ⚠ When handling the battery, avoid squeezing or touching the four exposed lithium polymer cells.
- Lift the battery from its edge nearest the logic board and remove it from the upper case.

Step 6 — Left Speaker



- Use the flat end of a spudger to pry the left speaker cable connector up and out of its socket on the I/O board.
- ⓘ Pry up from beneath the wires.

Step 7



- Use the flat end of a spudger to pry the left speaker off the adhesive securing it to the upper case.
- Remove the left speaker from the upper case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 04:57:15 AM.